

EZ Purge®

How it works



*Even for the world's largest water soluble
purge dam 72", installation is just minutes!*

In just three simple steps your purge dam is complete!

The illustration is a large bore pipe, 24" in diameter.

Helpful Hint:

Moisten an ordinary sponge in water. Lightly dab sponge along the water soluble tape portion of the dam to increase dam adhesion and ensure zero air permeability. Be sure the sponge is wrung out before applying; excess water in the sponge will cause the dam to dissolve.

Alternate Method (optional):

If the water-soluble tape becomes dry, lightly moisten the tape with a dampened cloth or foam brush. The adhesive will be reactivated instantaneously.


1. Peel

Peel liner to expose adhesive.




2. Insert

Insert EZ Purge® dam inside pipe.

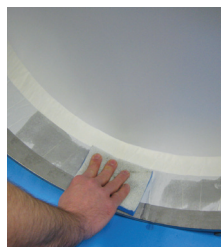

3. Press

Press tape along circumference to inside of pipe wall.

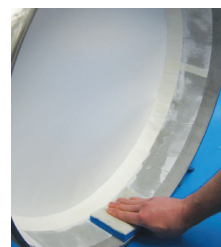

*For additional product information,
quotations and ordering, please contact:*

Aquasol Corporation
80 Thompson Street
North Tonawanda, NY 14120
Toll Free: 800.564.WELD(9353)
Phone: 716.564.8888
Fax: 716.564.8889
www.aquasolcorporation.com